

RETRO CHIC

RETRO TOP CASE 42L



USER MANUAL




FURCHTLOS

OPENING & CLOSING THE LID

- 1 To open the case, turn the key 20° counterclockwise. The lid will pop up slightly when the case is unlocked. Once the case is unlocked, use your hand to lift the lid fully open.

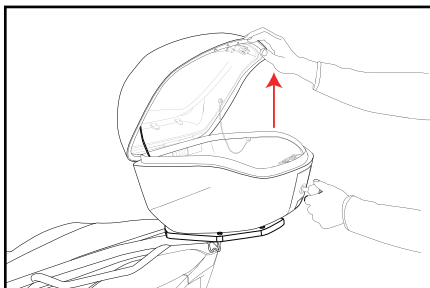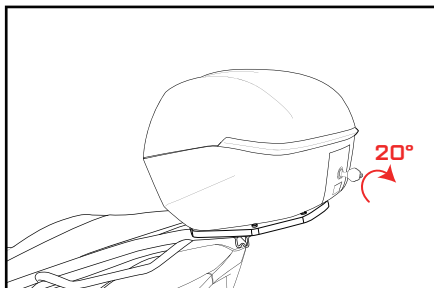



- 2 To close the case, press down on the lid until the lock engages.

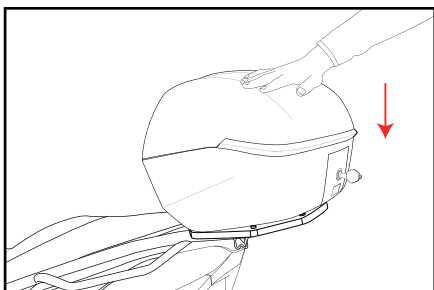



WARNING! Please be aware that the case will automatically lock when fully closed. Pay attention not to close the keys inside the case!

MOUNTING THE CASE



- 1 To assemble the case, first insert the rear legs of the case into the corresponding holes in the support plate.

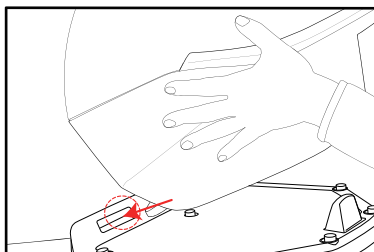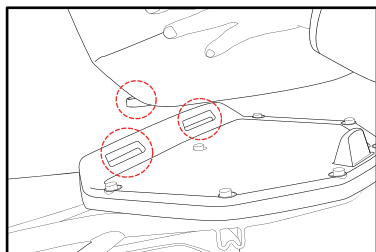

- 2** Insert the key in the case and turn it 45 degrees clockwise.

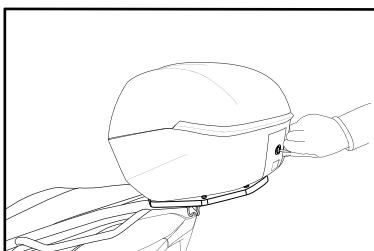
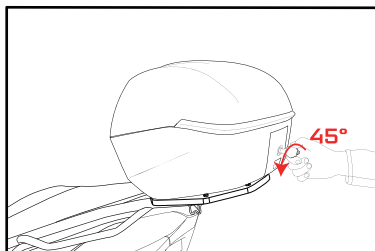


- 3** Press the button in the bottom of the case and lower it onto the plate to engage the wedge. Check that the top case is securely attached and cannot move freely.

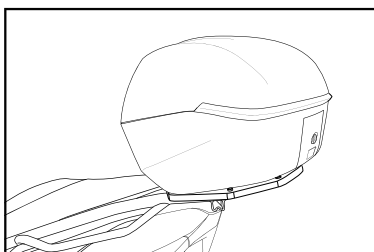
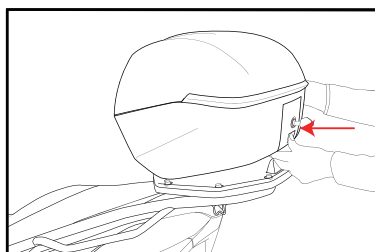


REMOVING THE CASE

- 1** Insert the key in the case and turn it 45 degrees clockwise.

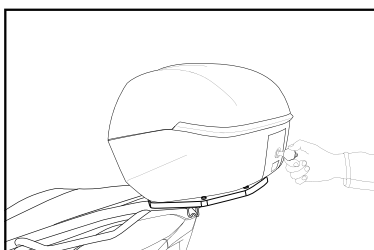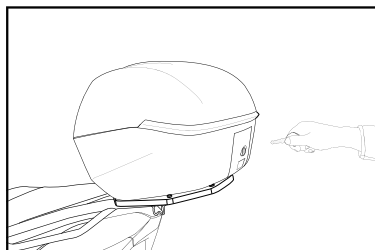

- 2** Press the button in the bottom of the case and lift it away from the plate.

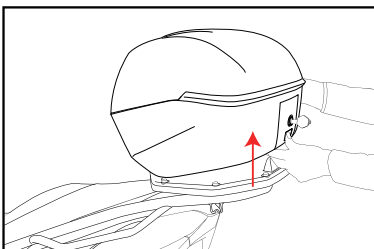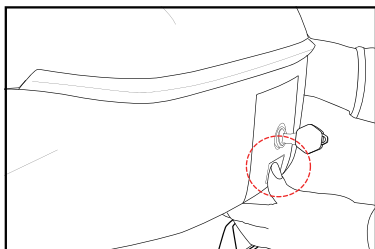

WARNINGS AND GUIDELINES

WARNING!

Please read the user manual carefully and follow the recommended assembly and care instructions.

It's recommended to check that the case is securely attached before each operation of the motorcycle.

Never drive the motorcycle with a case that is overloaded, that is not fully closed, that is not properly secured, or with damage that may affect the safe operation of the vehicle.

Please be mindful of how you pack your luggage. Cases should not be used to store flammable or explosive items or fragile items that can be easily broken.

CLEANING & MAINTENANCE

The cases should only be cleaned with water and a mild soap and dried with a soft cloth.

For natural aluminum cases, it's recommended to apply a silicone lubricant spray with a dry, soft cloth after the case is dry. The regular application of silicone lubricant spray helps to maintain a protective layer on the outside of the case and prevent permanent damage by harsh agents. This process can also be used to remove stains or marks which may appear after use.

Note: The silicone lubricant spray should only be used on natural Aero Aluminum cases. For cases in Anthracite, Cool White and other non-aluminum colors, the silicone lubricant spray does not need to be applied.

Do not use car wash detergents or other harsh cleaning agents or chemicals.

Do not use a pressure washer.

When the surface material is exposed to direct sunlight for a long time or is affected by environmental factors (such as haze, acid rain, etc.), the color may fade or change.

If the product is contaminated with gasoline or similar substances it must be cleaned immediately!

FURCHTLOS does not assume any responsibility for product damage and color change caused by improper cleaning and maintenance!



CLEAN WITH A DAMP CLOTH OR
SOFT SPONGE



DO NOT PRESSURE WASH



CLEAN GASOLINE OR OTHER
SPILLS IMMEDIATELY!



DO NOT USE CHEMICALS OR HARSH
CLEANING AGENTS